


AIM121 WIRING DIAGRAM

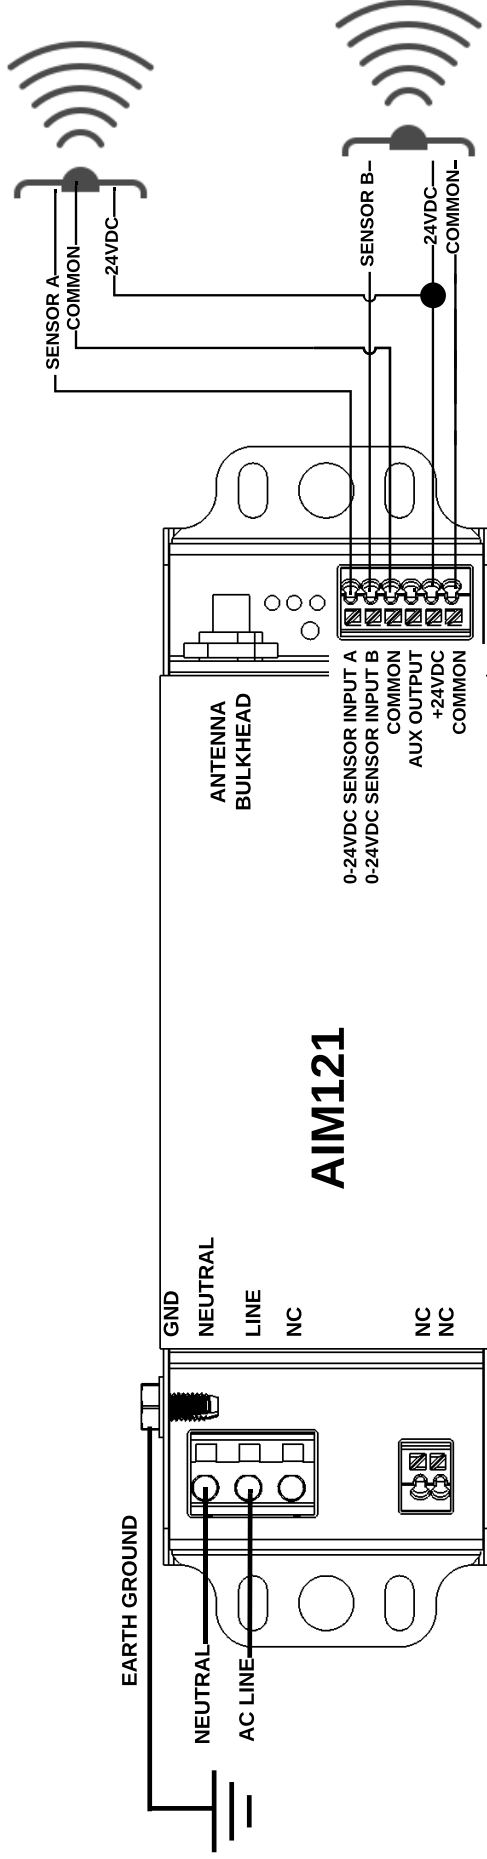

INSTALLING WIRES

AC WIRES:

USING A SMALL SCREWDRIVER, INSERT IT INTO THE SQUARE TERMINAL BLOCK LOCATED BEHIND THE WIRE CONNECTION POINT. APPLYING PRESSURE TOWARDS THE AIM121 WILL OPEN THE CONNECTION FOR THE WIRE TO BE INSERTED INTO THE ROUND CONNECTOR. USE THIS SAME METHOD TO RELEASE THE AC WIRES.

DC WIRES:

USE A SMALL SCREW DRIVER TO PUSH ON THE SQUARE BUTTON TO INSERT AND RELEASE WIRES IN THE TERMINAL BLOCK.